


# Operation Instructions

**1** Audio and Video Connection To TV RCA Audio and Video Input

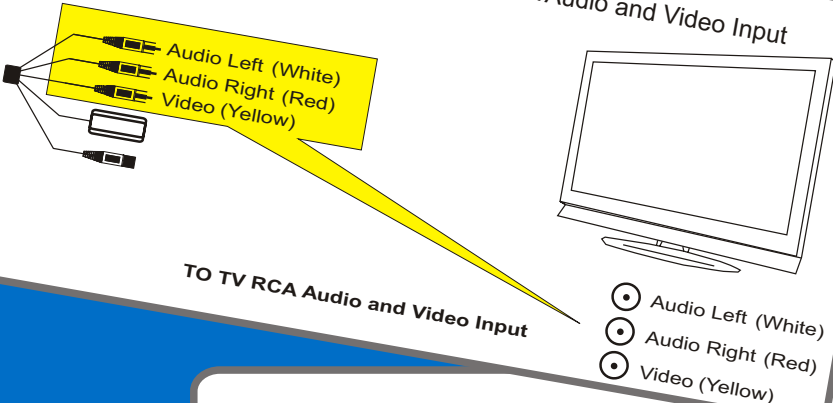


Audio Left (White)  
Audio Right (Red)  
Video (Yellow)

TO TV RCA Audio and Video Input

- Audio Left (White)
- Audio Right (Red)
- Video (Yellow)


**2**

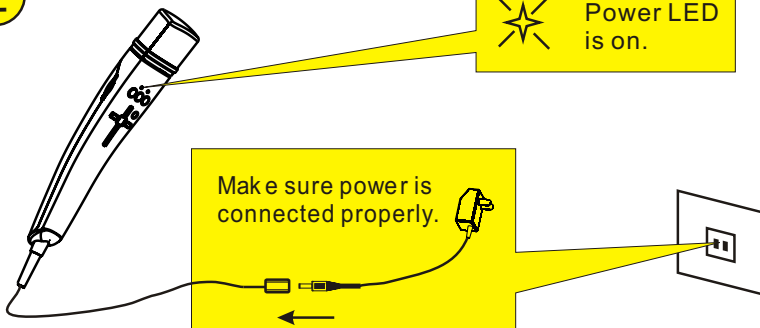

Power LED is on.


Make sure power is connected properly.

**3**

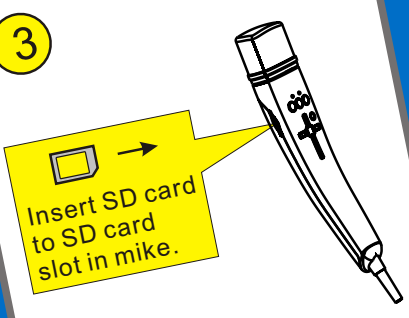

Insert SD card to SD card slot in mike.


**4**

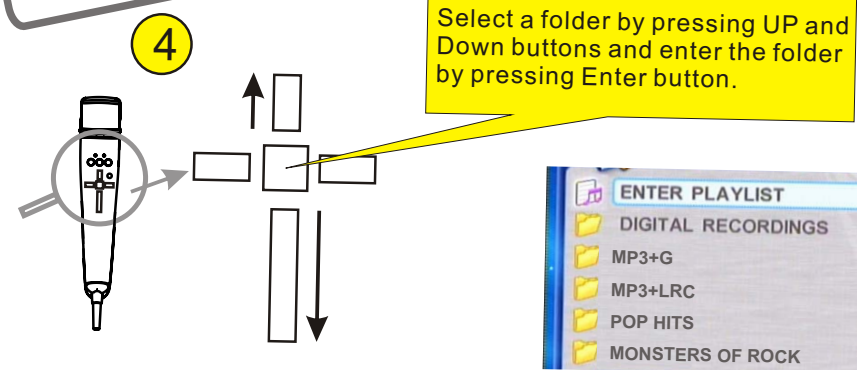


Select a folder by pressing UP and Down buttons and enter the folder by pressing Enter button.

ENTER PLAYLIST
DIGITAL RECORDINGS
MP3+G
MP3+LRC
POP HITS
MONSTERS OF ROCK


5

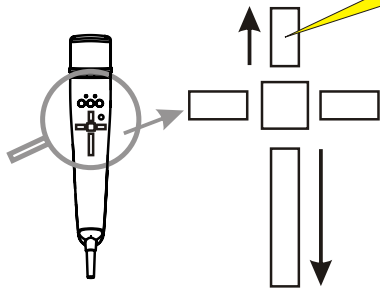

Select a song by pressing UP and Down buttons.

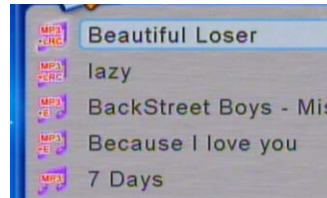

6

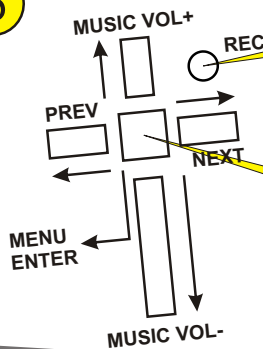


By pressing REC button, you record your performance when you start singing.


By pressing Enter button, you start singing.



7

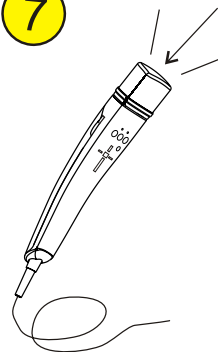

8

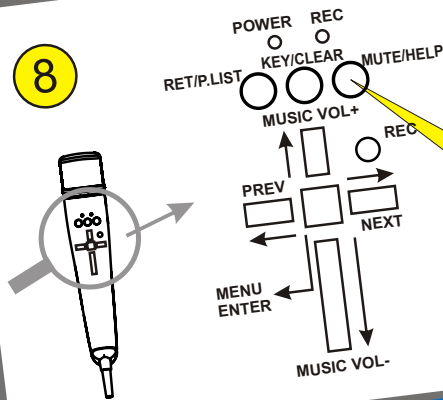

When you need help to operate mike, press Help button for one second to get into Help interface.